
ECO MODE SWITCH

PART # AESW



USE WITH ECOJAY SMARTZONE™ TO TURN ON AND OFF ECO-MODE (AWAY)

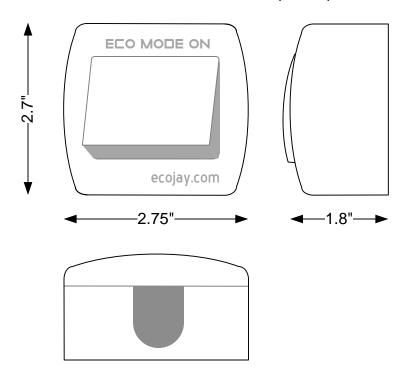



SPECS

24V / 10 AMP ON – OFF (SINGLE POLE) SURFACE MOUNT SWITCH 12 to 20 AWG WIRE

USER GUIDE

IF YOUR HOME OR
BUILDING HAS BEEN
EQUIPPED WITH A
SMARTZONE ECO-MODE
SWITCH, YOU CAN
MANAGE HOW COMFORT
IS CONTROLLED WITH
YOUR SMARTZONE HEAT/
COOL SYSTEM.

- MAXIMUM ECONOMY
 CAN BE SELECTED BY
 SWITCHING TO THE
 "ECO MODE ON"
 POSITION
- MAXIMUM COMFORT (NORMAL ZONING)
 CAN BE SELECTED BY SWITCHING OFF.

ECO MODE



ECO MODE ZONING. ONLY ZONE 1
THERMOSTAT WILL BE ABLE TO ENERGIZE
HEAT/COOL EQUIPMENT. OTHER ZONES
(2 AND UP) WILL OPEN AND CLOSE TO
RECEIVE OR RESTRICT AIRFLOW AS
NEEDED, BUT ONLY IF ZONE 1 CAN
ENERGIZE THE EQUIPMENT. USE ECO
MODE FOR MAXIMUM ENERGY SAVINGS.

COMFORT MODE



NORMAL ZONING MODE. EACH ZONE THERMOSTAT CAN ENERGIZE HEATING OR COOLING EQUIPMENT.

ECO (AWAY) MODE SWITCH

INSTALLATION

