


# SUPPLY AIR TEMPERATURE SENSOR


# ASAS

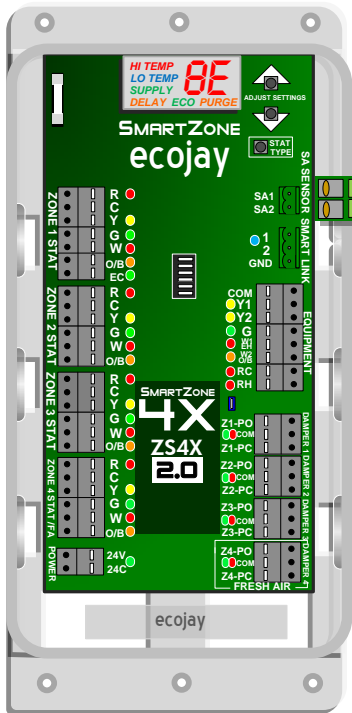



**ASAS INCLUDED WITH SMARTZONE**

## INSTALLATION

**GAS/ELECTRIC OR DUAL FUEL**

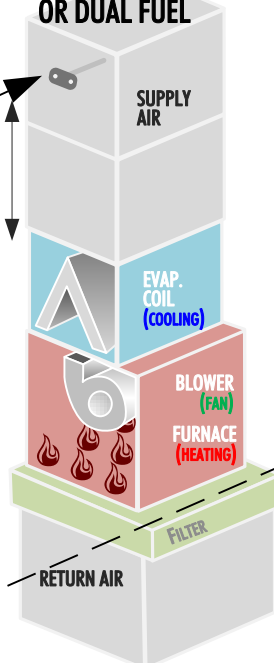


**HEAT PUMP W/ ELECTRIC HEAT**

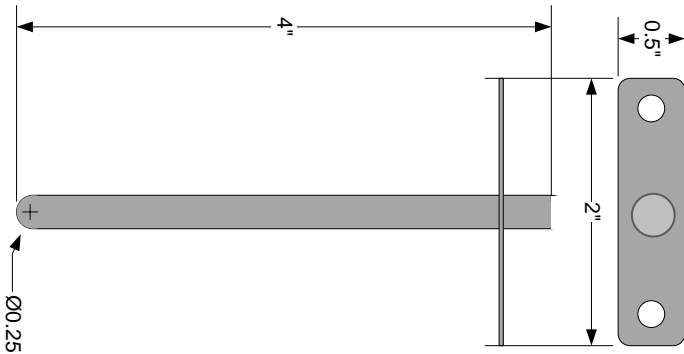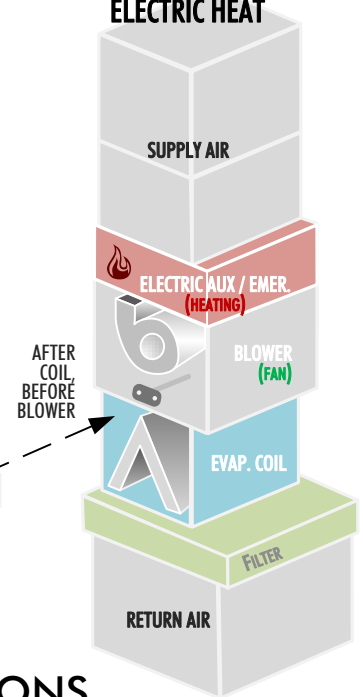

## SPECIFICATIONS


<b>MOUNTING</b>	MOUNT SECURELY IN ANY ORIENTATION (VERTICAL, HORIZONTAL OR DIAGONAL)
<b>ACCURACY RANGE</b>	0°C TO 100°C
<b>ACCURACY</b>	+/- 0.5°F
<b>CASING</b>	STAINLESS STEEL
<b>AMBIENT RESISTANCE</b>	10 KΩ +/- 2.5% @ 25°C
<b>SENSOR TYPE</b>	10K, TYPE III
<b>MAX TEMP DISPLAY</b>	199°F OR 199°
<b>ENVIRONMENTAL</b>	MOISTURE RESISTANT
<b>DIMENSIONS</b>	LENGTH: 4.0" DIAMETER: 0.25"
<b>MOUNTING DIMENSIONS</b>	PLATE: 2" X 0.5" HOLES: 1/4" DIAMETER (1.5" CENTER TO CENTER)

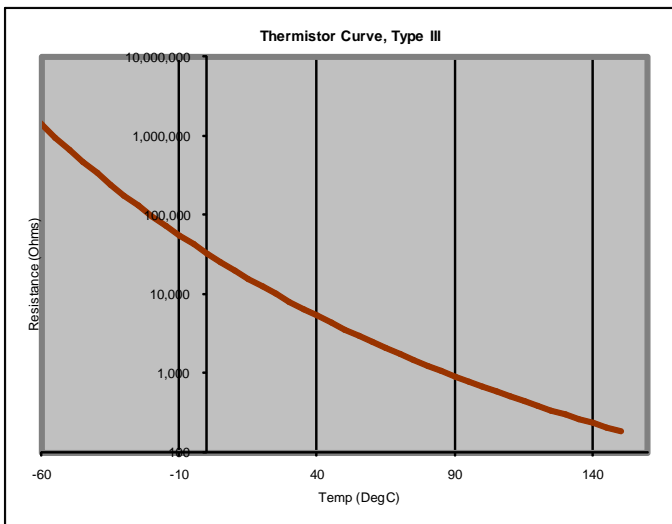

ADDITIONAL WIRE LENGTH CAN BE ADDED TO THE EXISTING ASAS LEAD UP TO A TOTAL OF 100 FT COMBINED LENGTH.

- REMOVE THE GREEN PLUG CONNECTOR AND USE SOLDER OR WIRE NUTS TO CONNECT 18 GAUGE WIRE TO THE EXISTING WIRE LEADS ATTACHED TO THE ASAS.

*NOTE: WIRE CONNECTIONS MUST BE CLEAN AND CONTACT BETWEEN THE CONNECTED WIRES MAXIMIZED TO INSURE PROPER SENSOR PERFORMANCE. POOR CONNECTIONS WILL CAUSE INACCURATE READINGS.*

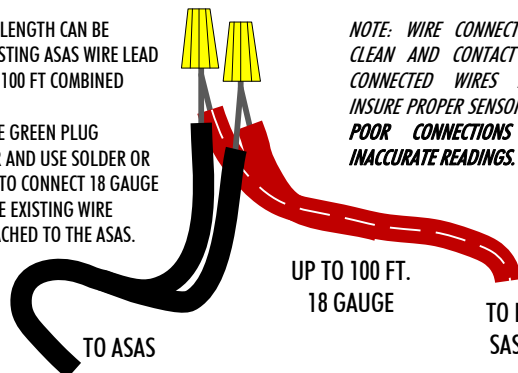

**5 YEAR LIMITED WARRANTY** [ecojay.com](http://ecojay.com) 888-523-3265